

## **TO PROGRAM THE BALL & COIN COUNTS**

1. Press " Clear "
2. Press " 3,1 "
3. Press " 1,2,3,4 "
4. Press the number of coins required to start a game " 1 - 100 "
5. Press " Rent A "
6. Press the number of balls per game " 1 - 255 "
7. Press " Rent B "
8. Press " Send "
9. Press " # "