

SPEED PROGRAMMING PROCEDURES

SPEED PROGRAMMING CODE FOR ONE LIGHT BOX WITH 40/50/60

40 MPH CODE	50 MPH CODE	60 MPH CODE
“Clear”		
“3”, “1”		
“1”, “2”, “3”, “4”		
“2”, “1”, “2”	“2”, “1”, “3”	“2”, “1”, “4”
“Rent A”	“Rent A”	“Rent A”
“2”, “3”	“3”, “5”	“4”, “3”
“Rent B”	“Rent B”	“Rent B”
Hold Down Ball Count Micro switch On Baseball Machine	Hold Down Ball Count Micro switch On Baseball Machine	Hold Down Ball Count Micro switch On Baseball Machine
“Send”	“Send”	“Send”
Release Ball Count Micro switch on Baseball Machine	Release Ball Count Micro switch on Baseball Machine	Release Ball Count Micro switch on Baseball Machine
Proceed To 50 MPH Code	Proceed To 60 MPH Code	“#” to exit programming

SPEED PROGRAMMING CODE FOR ONE LIGHT BOX WITH 50/60/70

50 MPH CODE	60 MPH CODE	70 MPH CODE
“Clear”		
“3”, “1”		
“1”, “2”, “3”, “4”		
“2”, “1”, “2”	“2”, “1”, “3”	“2”, “1”, “4”
“Rent A”	“Rent A”	“Rent A”
“3”, “5”	“4”, “3”	“5”, “1”
“Rent B”	“Rent B”	“Rent B”
Hold Down Ball Count Micro switch On Baseball Machine	Hold Down Ball Count Micro switch On Baseball Machine	Hold Down Ball Count Micro switch On Baseball Machine
“Send”	“Send”	“Send”
Release Ball Count Micro switch on Baseball Machine	Release Ball Count Micro switch on Baseball Machine	Release Ball Count Micro switch on Baseball Machine
Proceed To 60 MPH Code	Proceed To 70 MPH Code	“#” to exit programming