

101 CARD USAGE INSTRUCTIONS

- 1) Disconnect microprocessor (gray box) from power supply.
- 2) Open gray box and remove lid from inner black box.
- 3) Slide 101 E-Prom Card into empty slot (empty slot should be located between the 100 & 102 cards). The 101 card is keyed and will only go in one way, **DO NOT FORCE**.
- 4) After 101 E-Prom Card has been inserted and the processor has been un-plugged for at least 10-seconds, reconnect power supply to processor. A full set of numbers should appear on the display board (10012, 41234, etc...). If only a single number shows, disconnect power wait 10-seconds then reconnect power. Keep disconnecting and reconnecting power until you get a full set of numbers on the display panel.
- 5) After numbers appear, press the “DISPLAY” button then the “RUN” button and finally the “CAGE” button. The display panel should read “10000”.
- 6) Disconnect power from processor and remove the 101 E-Prom Card. You are now ready to reprogram for your specific ball and coin amounts. Refer to “PROGRAMMING BALL AND COIN COUNTS” on page 16.

