


## CURRENT SENSOR ADJUSTMENT PROCEDURE

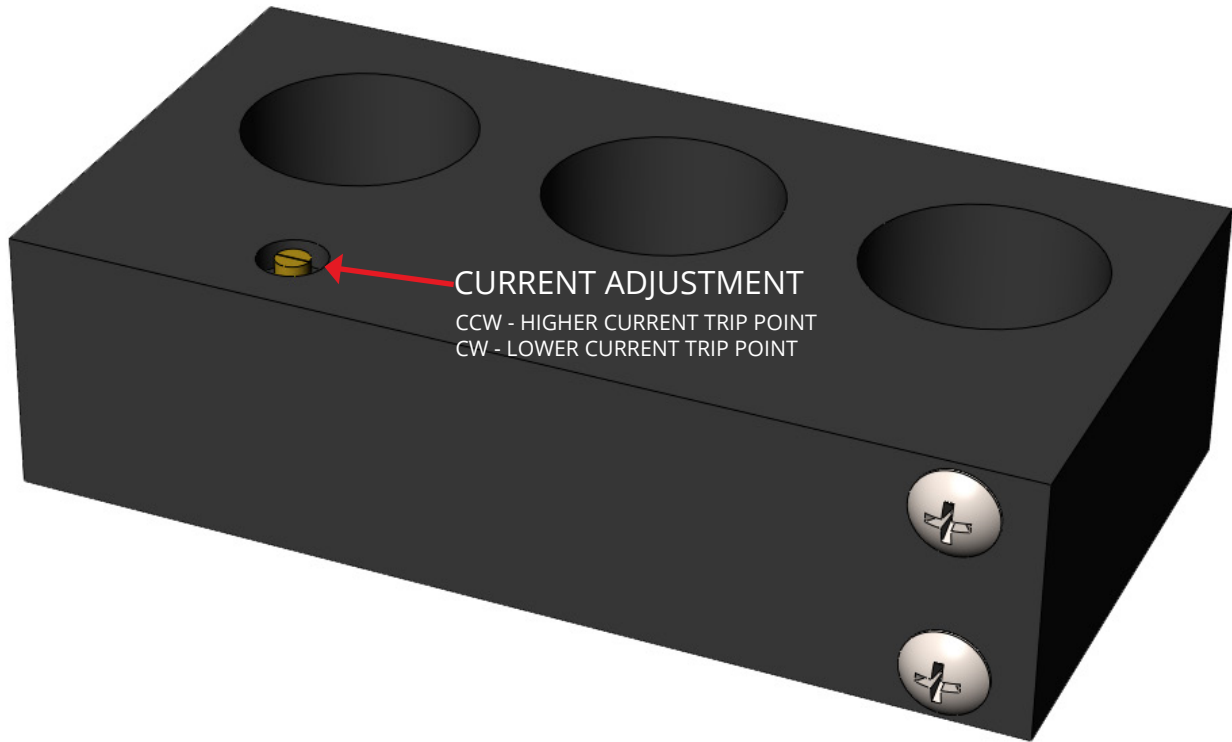

### IF THE CONVEYOR DOES NOT START WHEN A PITCHING MACHINE IS ACTIVATED DO THE FOLLOWING:

Locate the adjustment screw as shown above.

Turn the adjustment screw clockwise with the machine running until the conveyor turns on.  
(NOTE: there are 28 complete turns of adjustment on the screw, but the screw will never bottom out).

Once the conveyor turns on, manually delete the game by using the display panel for that cage and see if the conveyor turns off. If the conveyor does not turn off then turn the adjusting screw counter-clockwise until the conveyor stops, then turn the adjusting screw 5 complete revolutions clockwise.

### IF THE CONVEYOR CONTINUALLY RUNS WITHOUT A PITCHING MACHINE ACTIVATED DO THE FOLLOWING:

Locate the adjustment screw as shown above.

Turn the adjustment screw counter-clockwise until the conveyor turns off.  
(Note: there are 28 complete Turns of adjustment on the screw, but the screw will never bottom out).

Once the conveyor turns off activate a game and see if the conveyor turns on. If the conveyor does not turn on then turn The adjusting screw clockwise until the conveyor comes on, then turn the adjusting screw 5 complete revolutions counter-clockwise.